

JayDee Enterprises Inc.

3465 Lost Nation Rd. #15

Willoughby, OH 44094

PH (440) 946-9367 or (800) 989-0162

Fax (440) 946-6148

Email us at jaydeevbelts@sbcglobal.net

Visit our website at www.jdv-belts.com

ACCU-LINK ADJUSTABLE LINK BELTING

PRICE List 8013 ~ Effective July 1, 2008



Belt Size	Part No.	Price Per Foot
3L (3/8")	3L - Link	\$6.20
A (1/2")	A - Link	\$5.70
B (5/8")	B - link	\$6.70
C (7/8")	C - Link	\$11.00
D (1 1/4")	D - Link	\$17.50

MINIMUM ORDER LENGTH ON ANY SIZE IS 10 FT.

INSTALLATION IS A SNAP!!

With Accu-link, installation and assembly is as easy as a snap and a twist. No special tools are required to couple or uncouple each

Accu-link belt. Belts can be made to accommodate any length, which makes them ideal for emergency repairs and replacements. Once assembled, Accu-link v-belts install in a fraction of the time needed for endless rubber belts. Accu-link v-belts install in minutes without removing outboard bearings or moving motors. See back of page for installation.

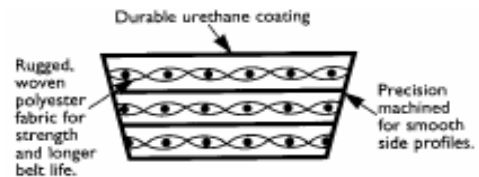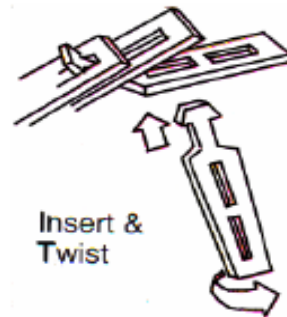

Accu-Link belts are ideally suited as a temporary replacement or permanent substitute for conventional rubber v-belts. Horsepower ratings are the same for our twist link v-belts as they are for conventional v-belts.

Accu-Link v-belt construction offers superior resistance to most common industrial solvents and chemicals, oil, water and temperature extremes (from - 40° F to 240° F.)

These belts also dissipate heat and run cooler than conventional belts.

ORDER TODAY!!

Accu-Link Adjustable Link V-Belts

Weight	
3L - LINK	.05 LB/FT
A - LINK	.06 LB/FT
B - LINK	.09 LB/FT
C - LINK	.17 LB/FT
D - LINK	.25 LB/FT

**Accu-Link is available in lengths of 10 feet
or in cartons of 50 feet**

INSTALLATION INSTRUCTIONS

- 1. Before installing, turn belt inside out and couple the belt.**
- 2. Place endless Accu-link belt in the nearest small sheave groove.**
- 3. Extend belt and place in the nearest large sheave groove.**
- 4. Manually turn the Accu-link belt until it is in the groove all around drive.
Do Not jog motor.**
- 5. Continue to manually work the belt from groove to groove.**
- 6. Repeat until all grooves are filled.**

ALTERNATE INSTALLATION

- 1. Form Accu-link v-belt to the correct pitch length.**
- 2. Move motor forward.**
- 3. Place all belts in position.**
- 4. Move motor back into position while applying correct tension.**
- 5. Secure motor tightly.**

Belt Length Determination

**Lay out pitch length of belt desired. Remove one (1) link in every 24 for
A & B section or (1) link in every 20 for C-Section.**

Retensioning:

**Like all v-belts, Accu-link may require retensioning after 1-3 hours of running.
HP Capacity: Use the same rating as for standard rubber V-Belts.**

HP Capacity: Use the same rating as for standard rubber v-belts.