

Accu-Link Adjustable Link V-Belts

WEIGHT	
3L-LINK	.05 LB/FT
A-LINK	.06 LB/FT
B-LINK	.09 LB/FT
C-LINK	.17 LB/FT
D-LINK	.25 LB/FT

Accu-link is available in lengths of 10 feet
or in cartons of 33 feet

INSTALLATION INSTRUCTIONS

1. Before installing, turn belt inside out and couple the belt.
2. Place endless Accu-link belt in the nearest small sheave groove.
3. Extend belt and place in the nearest large sheave groove.
4. Manually turn the Accu-link belt until it is in the groove all around drive. Do not jog motor.
5. Continue to manually work the belt from groove to groove.
6. Repeat until all grooves are filled.

ALTERNATE INSTALLATION

1. Form Accu-link v-belt to the correct pitch length.
2. Move motor forward.
3. Place all belts in position.
4. Move motor back into position while applying correct tension.
5. Secure motor tightly.

Belt Length Determination

Lay out pitch length of belt desired. Remove one (1) link in every 24 for A & B section or (1) link in every 20 for C-section.

Retensioning: Like all v-belts, Accu-link may require retensioning after 1-3 hours of running.

HP Capacity: Use the same rating as for standard rubber V-Belts.